 
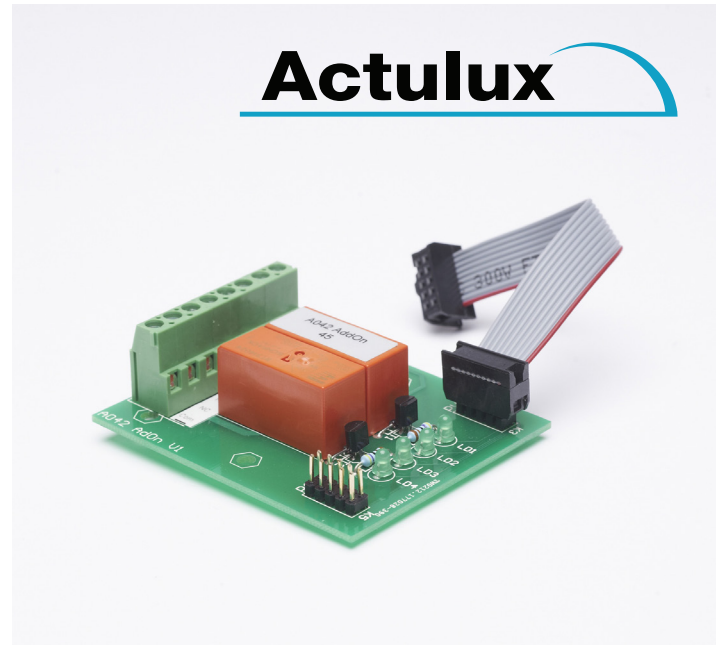 


**“Add on” Relay PCB for Indication of Window position  
heat control, indication on BMS controls, intruder alarms**

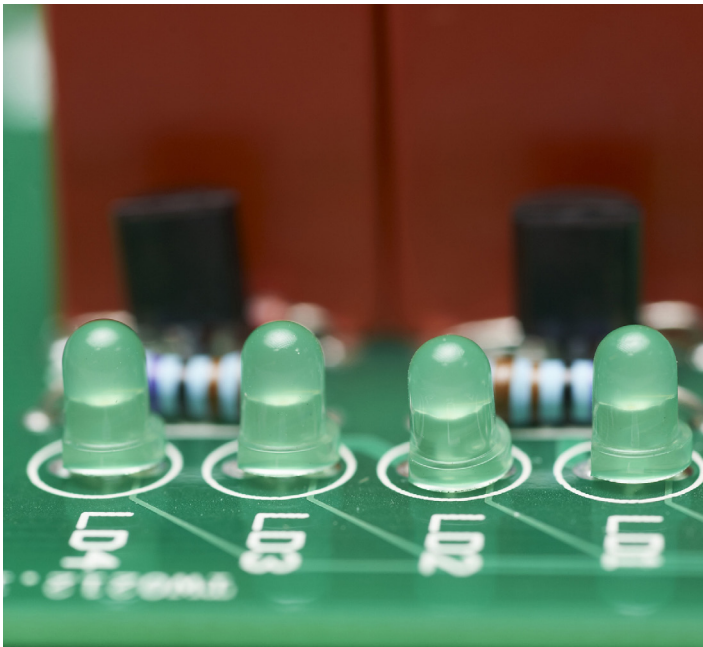


## “Add on” Relay PCB for Indication of Window Position

 This “Add on” relay PCB can be used where indication about opened windows on the comfort or alarm function is needed.

The “Add on” relay PCB is going to be connected through a flat cable to the SV control unit and the indication LED display in the front.

Note! Requires special software - if the Control Panel’s software is later than version 501.

### Connection

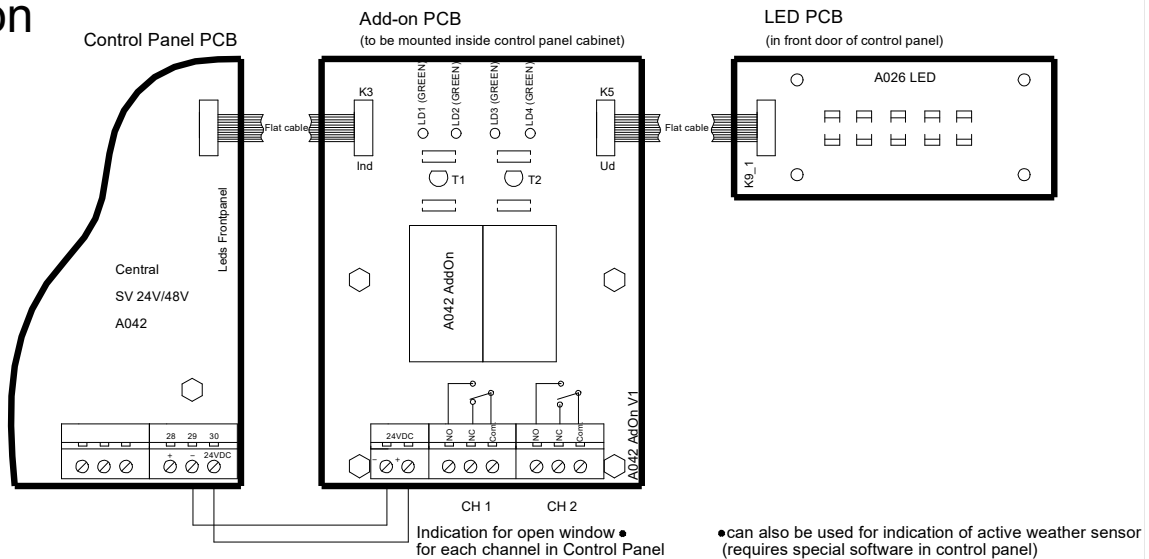

### FEATURES

Supply: 24V DC

Contact function: 2 pcs. NO/NC contacts

Load on contacts: 230V / 2A

LED1 / LED2: Indication about open

Can also be used for indication of active weather sensor (requires special software in control panel)

Part no.: 111690