Weekly timer

User Manual



Description

- Installation on DIN-bracket.
- Programming day by day or in 7 different days (week).
- Up to 8 different ON/OFF.
- Exact time setting.
- The LCD display shows the time in hours and minutes and the programming status "ON/AUTO/OFF".

Technical specifications

Power supply: 180 - 264V (50/60Hz)

Smallest interval: 1 min. Weight: approx. 150 g

Display: LCD


Battery capacity: 150 hours
Number of circuits: 1 voltage free contact SPDT

Load: 16A 250VAC

Operation temperature: Min. -10 Max. 55°C Storage temperature: Min. -20 Max. 70°C

Power consumption: 5VA

Dimensions

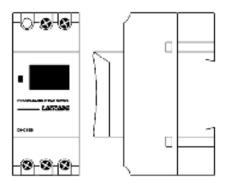

Connection



- 1. Connect AC supply and the batteries will start to charge. Press reset.
- 2. The weekly timer is pre-set to 24-hours display. To change into 12-hours display, please press "\(\theta\)" for 5 seconds the display shows "AM".

 To change back into 24-hours display, press "\(\theta\)" again for 5 seconds.
- 3. Programming:

Step	Button	Programming
1	Press "P"	Set the first "ON time" (the display shows "1 ON")
2*	Press " D+ "	Select weekday/period (shown on top of the display – if you want the same time is every day, do not press this button)
3	Press "H+/M+"	Set hours and minutes
4	Press "P"	Set the first "OFF time"
5	Press "D+"	Select weekday/period (shown on top of the display – if you want the same time is every day, do not press this button)
6	Press "H+/M+"	Set hours and minutes
7	Repeat step 2 - 6	Set 2-8 ON/OFF time
8	Press "⊕"	In order to end the programming

In order to change ON to OFF or conversely, press "MANUAL".

- * 10 different programs: (1: MO 2: TU 3: WE 4: TH 5: FR 6: SA 7: SU 8: MO, TU, WE, TH, FR 9: SA, SU 10: MO, TU, WE, TH, FR, SA, SU)
- 4. SETTING OF CLOCK (clock setting)
 - (1) Press "⊕" and "D+" at the same time until the date of the day is shown.
 - (2) Press "⊕" and "H+" at the same time in order to set the hours.
 - (3) Press "⊕" and "M+" at the same time in order to set the minutes.
 - (4) Press 'MANUAL" in order to show "auto on" or "auto off" depending on whether the clock should be in on- or off-mode after setting the time.
- 5. Press reset to delete all settings.

NB!

MAY NOT BE LOADED MORE THAN STATED UNDER TECHNICAL SPECIFICATIONS.